


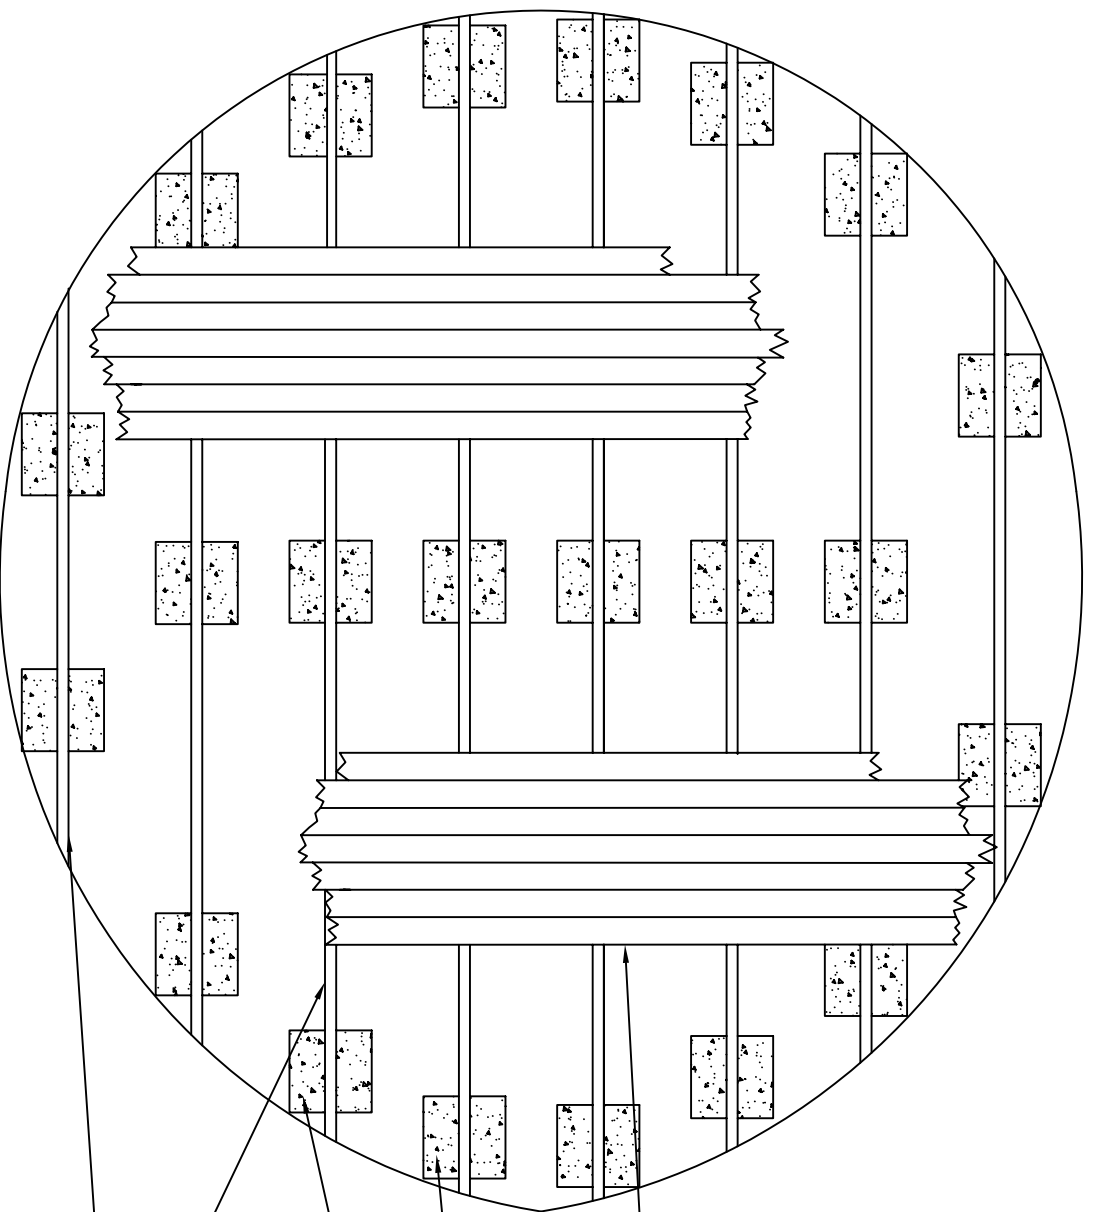

INTERIOR TIPI DECK



2" X 6" DECKING

CONCRETE
PAVERS

2" X 4" JOISTS

- 1) Level the spot where you think you are going to pitch the tipi. A layer of pea-gravel works well and provides good drainage.
- 2) Pitch the tipi cover according to the instructions. Make sure each pole is placed correctly (i.e. spread out far enough) but do not stake the tipi.
- 3) Roll the sides of the tipi so you can carry in materials.
- 4) Place the concrete pavers according to the drawing. On longer spans you will need a midway paver. Smaller tipis may need only two pavers per joist.
- 5) Set 2" x 4" joists on edge - 2' on center - on top of pavers
- 6) Cover with 2" x 6" decking or $\frac{3}{4}$ " plywood. Maintain 2' distance by marking the decking every 2' for a guide.